



PETLIBRO

Easy Feed Automatic Pet Feeder User Guide



Scan for more details
www.petlibro.com

PETLIBRO Easy Feed Automatic Pet Feeder

Model: PLAF003 & PLAF004

©Libro Corp. All Rights Reserved.

Manufacturer: Shenzhen Libro Technology Co., Ltd.

Address: Building 3, Cloud Park, Shenzhen, China, 518129

Made in China

PLAF00CY _B_V1.0



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Model: PLAF003 & PLAF004

Please read this User Guide before using the product and retain for reference. This product is intended for household use only.

SAFETY PRECAUTIONS


WARNING

- Dispose of all packaging materials properly. Some items may be packed in plastic bags; these bags could cause suffocation; keep away from children and pets.
- Do NOT allow small children to play with, in or around the pet feeder.
- To reduce the risk of injury, please keep close supervision when an appliance is used near children.
- Do NOT use the feeder with pets not able to reach the food tray or with any physical disability.
- Do NOT immerse the base part in water at any time as it may damage electronic components like the control panel.
- Do NOT place any foreign object in the pet feeder.
- Do NOT use outdoors. Check operation frequently to be sure the unit is dispensing properly.
- Do NOT use wet, canned or moist food.
- Do NOT disassemble the unit other than as instructed in this User Guide.
- Do NOT use the feeder for anything other than its intended use.
- Only use attachments recommended or sold by the manufacturer. The use of attachments not recommended or sold by the manufacturer may cause an unsafe condition. Do not modify the pet feeder.
- Do not operate any appliance if the unit is malfunctioning or has been damaged. Do not attempt repairs on the pet feeder yourself. Contact our customer service immediately for further instructions.
- Always unplug when not in use and before cleaning.
- Never pull on the electrical power cord to remove the plug from the wall outlet.
- If the plug of this device gets wet, turn on electricity to that wall outlet. Do not attempt to unplug.
- Examine the feeder after installation. Do not plug in if there is water on the power cord or plug.
- To avoid tripping, always position power cord out of the way of foot traffic.

CAUTION

- Do NOT allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard-plastic protector) at any hardware store to protect the power cord.
- If an extension cord is necessary, one unit with a proper rating should be used.
- Do NOT install or store the pet feeder where it will be exposed to weather or temperatures below 4°C / 40°F.
- Use alkaline D batteries to power. Do NOT use rechargeable batteries.
- Check the batteries regularly. Before leaving for extended time, always replace batteries with new ones.
- Do NOT lift the pet feeder by lid, food tank, or food tray. Lift and carry it using both hands and the base, while keeping the unit in an upright position.
- Suitable for dry food ONLY, with kibble size ranging from 2-15mm / 0.07-0.6in in diameter. Larger kibble may get stuck at the food outlet.
- Read and observe all important notices listed on the pet feeder and in the packaging.

PRODUCT DIAGRAM

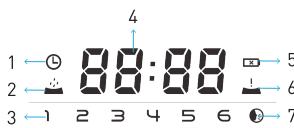

LCD Display

- 1.Time Setting
- 2.Manual Feeding
- 3.Meal (1-6)
- 4.Time (24H format)
- 5.Battery level
- 6.Low Food Storage Alert
- 7.Meal Call Setting

6-Button Navigation Quick Guide

Icon	Description & Function	Instructions
∅	Recording	<ul style="list-style-type: none">· Press and hold for 3s until a beep is heard to start recording.· A double beep can be heard after the recording completed.*· Repeat above to record a new meal call.
⚙	Setting	<ul style="list-style-type: none">· Press and hold for 3s to unlock and enter the setting mode.
▲	Up	<ul style="list-style-type: none">· Press to increase value.
▼	Down	<ul style="list-style-type: none">· Press to increase value.· Double press to manually feed a portion.*
⟲	Return/Cancel	<ul style="list-style-type: none">· Press to return to last step.· Press to return to lock mode.
OK	Confirm/OK	<ul style="list-style-type: none">· Press to confirm the setting.
∅+OK	Reset=Setting + Confirm/OK	<ul style="list-style-type: none">· Press and hold the Setting and Confirm/OK at the same time for 3s until a beep.

*Note:


- 1) About 0.06cup/1tbsp/15ml per portion.
- 2) keep press the Record Button during recording.

Note:

- 1) Please keep the food bucket and the pet food in a dry condition.
- 2) Do NOT use canned, wet or moist pet food.
- 3) Recommend kibble size ranging from 2-15mm / 0.07-0.6in in diameter.
- 4) Before moving the feeder, please empty the tray, press it down to remove from the base. Hold the base instead of any other parts when lifting the feeder.

Set the Power

- Open the battery compartment at the bottom of the feeder. Insert the Micro USB power cord into the connector on the bottom and extend the power cord out along the designed wire slot. Close the battery compartment. Turn on the power switch.
- The LCD display will light up automatically indicating the feeder is on now.

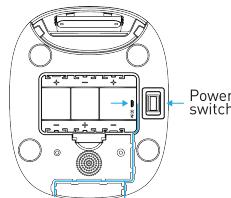

Note:

- 1) Battery NOT included.
- 2) Before connecting to power, make sure all parts are clean and completely dry.
- 3) You could also put in 3 pieces of D cell batteries, so that the feeder can still work according to your scheduled feeding plan even during outage.
- 4) The battery level icon on the display blinks on a low battery level.


HOW TO USE

Assembling Food Tray

- Place the feeder in a desired location. Check the food tank is in place. Place the feeding tray into the feeder from the front.

Set the Time

- Please set the current time before setting up feeding plan.
- Long press the Setting Button for 3 seconds, the Time Setting icon start to flash, which means it is in settings mode as shown in Fig1.
- Press Confirm/OK Button to confirm to enter the time setting. The hour is flashing as Fig2, Use the Up/Down Buttons to set the hour (24H format) as shown in Fig3. You can long press the Up/Down Button for fast setting.
- Press Confirm/OK Button to confirm the hour. Then the minute starts to flash, press the Up/Down Button for minute setting as shown in Fig4.
- Then press Confirm/OK Button to save and return to setting mode. Press Return/Cancel Button to exit or go on to set up other items.

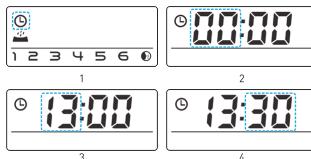

Note:

 
- 1) All operations during the setup process can be returned or canceled via the Return/Cancel Button.

Manually Feeding Your Pet

In the standby state, you can quickly feed 1 portion by pressing down Button twice within 1 second.

To set “feed now” for multiple portions:

- Long press Setting Button for 3 seconds to enter the setting mode.
- Press Down Button to switch the flashing icon to the feeding one as shown in Fig5.
- Press Confirm/OK Button to confirm and manual choose the feeding portions.
- Use the Up/Down Button to choose, as shown in Fig6.




- Press Confirm/OK Button to start feeding. Meanwhile, the operation screen will display the exact remaining portions need to feed as shown in Fig7.




Set the Daily Feeding Plan


- The feeder supports up to 6 meals per day.
- After setting up the current time, press and hold Setting Button for 3 seconds to enter the feeding plan setting mode.
- Press Down Button to switch the flashing icon to Digital 1 icon. As shown in Fig8.
- Press Confirm/OK Button to select the feeding portions, press Up/Down Button to set portions as shown in Fig9 and Fig10.
- Press Confirm/OK Button to go to feeding time setting as shown in Fig11 and Fig12, Press Confirm/OK Button to save. Press Return/Cancel Button to exit and the auto feeding icon will show at standby state, as shown in Fig13.

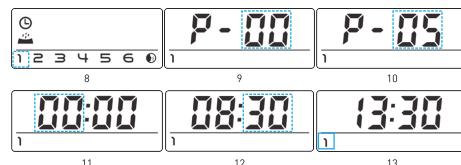

 - If you need to set multiple meals, please repeat the above steps and select the corresponding Digital number icon according to the meals in the setting interface as shown in Fig14 and Fig15.



 - To cancel a certain meal, you can set the feeding portions to be 0. Then second feeding was cancelled as shown in Fig16 and Fig17.



16



17

- Press and hold the Setting Button for 3 seconds to enter the setting mode.

Select the Down Button to switch the flashing icon to Record Button as shown in Fig18.

- Press Confirm/OK Button to confirm play times of recording playback by using the Up/Down Buttons as shown in Fig19. Press Confirm/OK Button to save.



18



19

Note:

- The recording Button should be pressed during the recording.
- The maximum record time is 10 seconds.
- To cancel the feeding recording, set the number of playback to 0.
- When batteries as the only power source, for the purpose of power saving, the voice call will only play 1 time before dispensing.

System Alarms

- When the battery is low, the screen will display a low battery signal as shown in Fig20.
- When the food is insufficient, the screen will display the low food storage as shown in Fig21
- When these two cases happened together, the Indicator light will be in a red breathing light.
- After renewing the battery or re-fill food, the red Indicators and screen icons will disappear automatically within 60 seconds.



20



21

*Reference for Meal & Portion setting:

Intake/Daily	Portion/- Daily	Meal Number/ Daily	Portion/Ave. Each Meal	Intake/Ave. Each Meal
Appr. 1.4cup/ 20tbsp/300ml	20	2	10	Appr. 0.7cup/ 50tbsp/150ml
Appr. 1cup/ 18tbsp/270ml	18	2	9	Appr. 0.5cup/ 9tbsp/135ml
Appr. 0.5cup/ 8tbsp/120ml	8	4	2	Appr. 0.13cup/ 2tbsp/30ml
Appr. 0.5cup/ 8tbsp/120ml	8	2	4	Appr. 0.25cup/ 4tbsp/60ml
Appr. 0.67cup/ 8tbsp/120ml	10	2	5	Appr. 0.33cup/ 5tbsp/75ml

Important Notes

- About 0.06cup/1tbsp/15ml kibbles are dispersed each portion.
- A few kibbles may be left at the chute after feeding, and it may come out of the outlet when the machine is moved (doesn't indicate a faulty equipment).
- Refer to the instructions on your pet food packaging for detailed feeding instruction.

Recording a Customized Meal Call

- Press and hold the Record Button for 3 seconds until the feeder makes a "Beep" sound to start recording. After the recording is completed. The feeder will make a double "Beeps".
- After recording, you can preview the audio by short pressing the Record Button. Repeat above if need to re-do the recording. The closer to the microphone, the louder the voice can be recorded.
- The default of voice recording playback is 3 times. It can be customized up to 5 times at the setting by taking the following steps:

LED Display Error

Error Code	Indicator Light Status	Means	Action
N/A	Blue Flashing Light	M1: Normal dispensing M2: Food blocked at the food outlet	<ul style="list-style-type: none">For M2: During the next 10mins, the product will continue to dispense if pet finish the food in the food tray. Otherwise it will stop to avoid overflow.The product could not be operating during this period.
N/A	Red Breathing Light	Food storage below the food tank sensor	<ul style="list-style-type: none">Re-fill foodAfter the refill, the flashing red light will be disappeared within 60 seconds.
E - 01	Red Flashing Light	Food tank empty	<ul style="list-style-type: none">Re-fill foodAfter the refill, the flashing red light will be disappeared within 60 seconds.
E - 02	Red Flashing Light	Food blocks in dispensing system	<ul style="list-style-type: none">Clean up the stuck food manuallyTurn the power switch off and restart again.

Reset

In the standby state, press and hold the Setting Button and Confirm/OK Button at the same time for 3 seconds until the feeder makes a short beep. You can reset the feeder to factory default.

Cleaning & Care

It's recommended to clean the feeder regularly for the health of your pet.

The washable parts of the Petlibro auto feeder are as follows: food tank and food tray, they can be submerged in water. Clean by hand-washing using cool or warm soapy water.

Disassembling the food tank

- If you have food inside the tank or chute, double press the Down Button and repeat for a few times to empty first.
- Push the tank upward to disassemble.

Disassembling the food tray

- Empty the tray, pull it to remove from the base.

Note: Rinse and let all parts air dry completely before assembling.

Warranty

We provide a 1-year warranty for this appliance. Please email our support team at support@petlibro.com if you have any questions, and attach your order ID in your email. We'll get back to you as quick as possible.

For more information, please visit www.petlibro.com

What's in the box

- 1 x Automatic Pet Feeder
- 1 x Power Adapter
- 1 x User Guide Kit

Specifications

Model	PLAF003
Food Tank Capacity	6 liters
Screen	LCD screen
Power	DC 5V power adapter; 3 x alkaline D batteries
Power Adapter	AC100-240V Input, DC 5V output
Power Consumption	5W
Operating Temperature	0°C - 55°C / 32°F - 131°F
External Socket	Micro USB
Dimensions	25.0 x 19.8 x 37.5cm / 9.8 x 7.8 x 14.8in
Net Weight	1.8kg / 3.97lbs

Model	PLAF004
Food Tank Capacity	4 liters
Screen	LCD screen
Power	DC 5V power adapter; 3 x alkaline D batteries
Power Adapter	AC100-240V Input, DC 5V output
Power Consumption	5W
Operating Temperature	0°C - 55°C / 32°F - 131°F
External Socket	Micro USB
Dimensions	35.8 x 19.4 x 33.5cm / 14.1 x 7.6 x 13.1in
Net Weight	2.1kg / 4.6lbs


Troubleshooting

The answers to these questions should help you solve most problems you may have with the pet feeder. If they do not, please contact our Customer Care Center via support@petlibro.com

Problem	Solution
I can't press any Buttons	Please press and hold the Setting Button for 3s to enter the setting mode.
I can't remember the meal settings	Unlock the screen, press the Set Button and you can see the meal number shown, enter each meal, you can review all the meal time and portion setting.
The food won't come out	<ol style="list-style-type: none"> 1] Please be sure to fill in with dry food; kibble size should range from 2-15mm / 0.07-0.6in in diameter. 2] Check whether any foreign objects are placed, disassemble the food tank and check the chute. Also check the food outlet. 3] Check whether it's low battery level - whether the power adapter is connected or there is any outage when no battery is installed.
LCD display is off	<ol style="list-style-type: none"> 1] Please press and hold the Setting Button for 3s to unlock the screen. 2] Check whether the power adapter is connected. 3] Contact the support team at support@petlibro.com if the display still won't light up when the appliance is well connected to power.
I can't disassemble the food tank	Please follow steps in Clean & Care
Food volume for each portion is not the same	The first few portions may vary, and it doesn't mean a faulty equipment. After about 6 feedings it should be almost even.

Appendix

PLAF003 Easy Feed 6L Automatic Pet Feeder

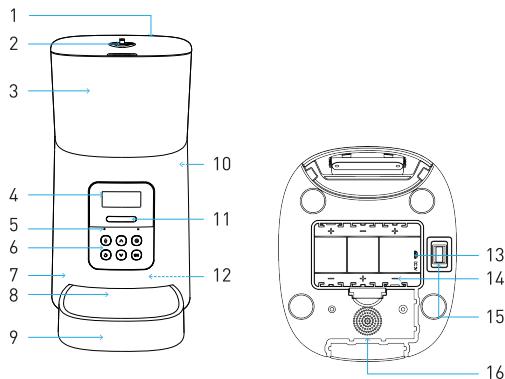


Front View

- 1.Lid
- 2.Lid Knob
- 3.Food Tank
- 4.LCD Display
- 5.Microphone
- 6.Control Panel
- 7.Base
- 8.Food Outlet
- 9.Food Tray
- 10.Low Food Storage Sensor
- 11.Indicator Light
- 12.Anti-Clog Detector

Bottom View

- 13.Power Socket
- 14.Battery Compartment
- 15.Power Switch
- 16.Speaker

PLAF004 Easy Feed 4L Automatic Pet Feeder

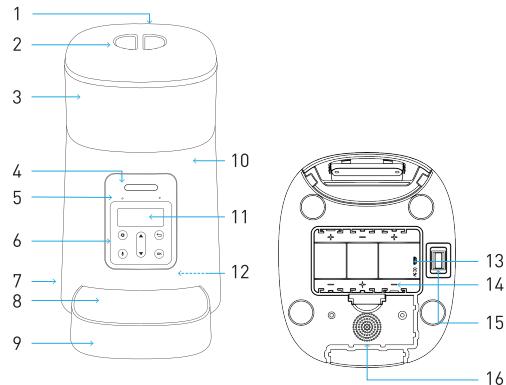

Front View

- 1.Lid
- 2.Lid Lift
- 3.Food Tank
- 4.Indicator Light
- 5.Microphone
- 6.Control Panel
- 7.Base
- 8.Food Outlet
- 9.Food Tray
- 10.Low Food Storage Sensor
- 11.LCD Display
- 12.Anti-Clog Detector

Bottom View

- 13.Power Socket
- 14.Battery Compartment
- 15.Power Switch
- 16.Speaker